


User Guide – SmartVent Synergy

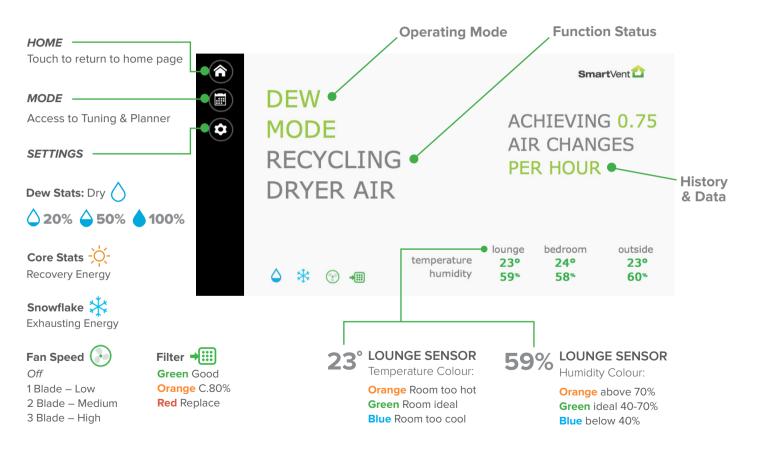

Modes

Available Schedule Modes

- Standby
- Auto
- Heat Transfer
- Temperature
- Humidity
- Ventilation

Additional Schedule Mode

Quiet


For those times when you want quiet, Evolve will lower the fan speed tolerance reducing air transfer noise.

TECHNICAL SUPPORT

If you have performance concerns contact your installer in the first instance. For further assistance contact SmartVent Technical on 09 259 1662

TROUBLE SHOOTING

If you experience a disconnection from your system, follow the adjacent connection guides to reconnect.

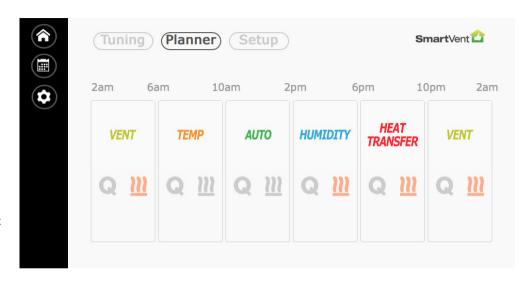

WIRELESS CONNECTION


Connect to EVOLVE wirelessly from any device, find the EVOLVE router in your Wi-Fi list then enter the password. **SSID**: evolve, **Password**: smartvent

EVOLVE CONTROLS

To open the EVOLVE controls, open a web browser, type in the website address (URL) below, and book mark it for future use. URL: 192.168.1.170

STANDBY	AUTO	HEAT TRANSFER	
ТЕМР	HUMIDITY	VENT	

Settings

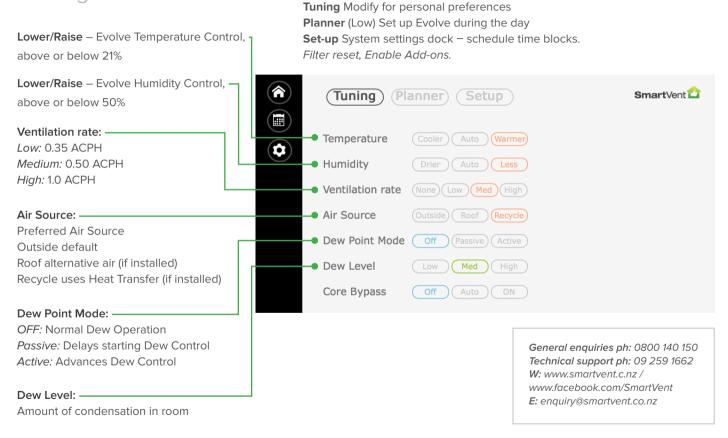



SmartVent Settings

Features & Settings			*Evolve needs to be adjusted for daylight saving.				
Reset: Reset all to default.		Pi	ress 2x to syr	nc time from the d	evice.		
Enable Add-on: Enable your new add-ons.	Set Date Time	Reset	Add ons	Planner Time	Filter	Firmware Update	
Planner: — Adjust 6 time slots for planne	r. Filter: ——						
August of time slots for planne	Filter reset.		re and Web: - web pages a	nd firmware.			



Distributed by: Simx Limited

Simx reserves the right to alter technical specifications without prior warning.

Pub1380