



HOME VENTILATION SYSTEMS



User Manual

Your guide to a healthier home



Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Isolate the mains supply before attempting to replace the system's air filter.

SMARTVENT EVOLVE2 SYSTEM

Contents

How the System Works	4
Quick Setup Guide	5
Screens and Navigation	8
Standby Screen	10
Home Screen	10
Home Screen Icons	11
Settings	13
Settings Interface.....	14
Ventilation.....	15
Heat Transfer	18
Tempering Heater	21
General Settings.....	24
Filter	25
Date/Time	26
Recycle	27
Maintenance.....	28
Troubleshooting.....	29
Error Codes.....	31
Glossary	32
Technical Specifications	33

How the System Works

Some features covered in this instruction manual are only available when installed and activated. Consult your installer for more information if you are interested in adding additional features to your system.

The SmartVent Evolve2 System



SmartVent Evolve2 is a positive pressure system which uses air taken from the roof cavity to ventilate your home.

System Enhancements¹⁾



Summer Feature

Adds outside air as second air source option so that your system can provide continued quality ventilation in warmer months and especially so when the roof cavity air temperature exceeds that of the outside air.



Heat Transfer

Used to transfer any excess heat from your lounge to your bedrooms.



Tempering Heaters

Designed for situations where supply air temperatures are too cool.

When system enhancements are added, your system can offer greater options in how it operates.

The options can override or influence one another as in the following examples.

Example: When the environment in your home meets your chosen heat transfer condition the ventilation and tempering heater functions deactivate.

Example: When the system is ventilating and conditions are met for the heater to turn on, the speed of the fan will be influenced by the heater function.



¹⁾ For more information about SmartVent system enhancements, contact 0800 140 150 or email enquiry@smartvent.co.nz

Quick Setup Guide

1 - Switch On

- Power on the system with the power button .

2 - Unlock the Touchscreen





- Press and hold the lock icon  for 5 seconds in the bottom left corner of the screen to unlock .




Adds outside air as second air source option so that your system can provide continued quality ventilation in warmer months and especially so when the roof cavity air temperature exceeds that of the outside air.

Quick Setup Guide *(cont'd)*


3 - Set the Clock



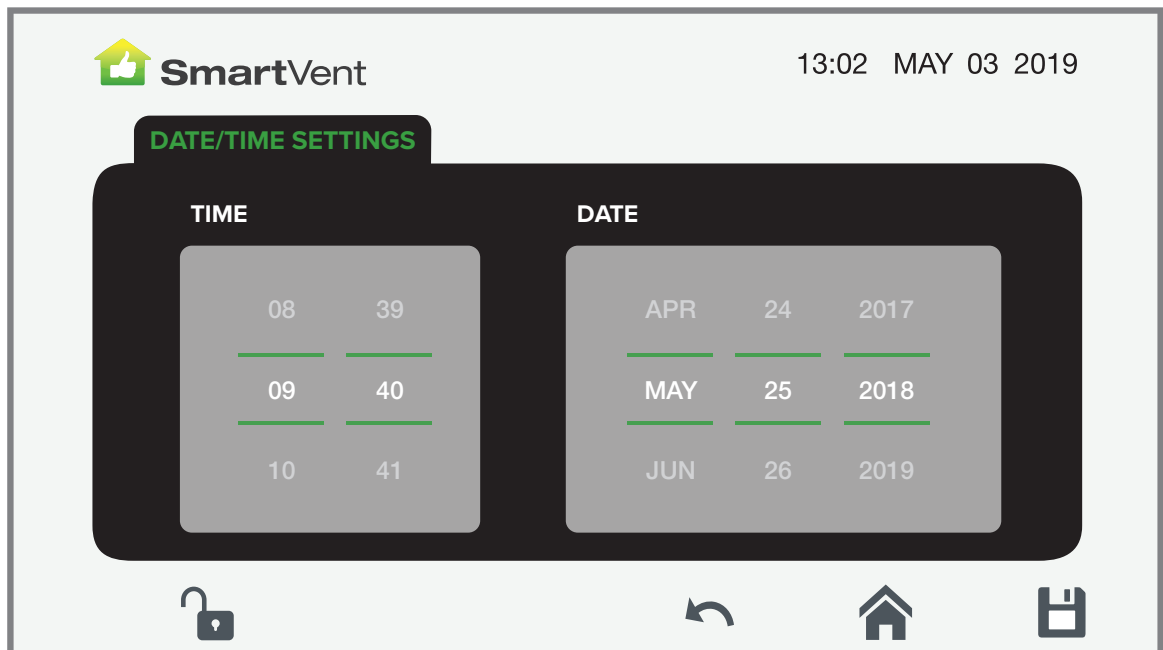


- Press the settings icon  on the home screen.
- Select the **DATE/TIME** icon .
- Scroll and select the current date and time.
- Press the save icon  to save your changes.
- Press the home icon  to return to the home screen.

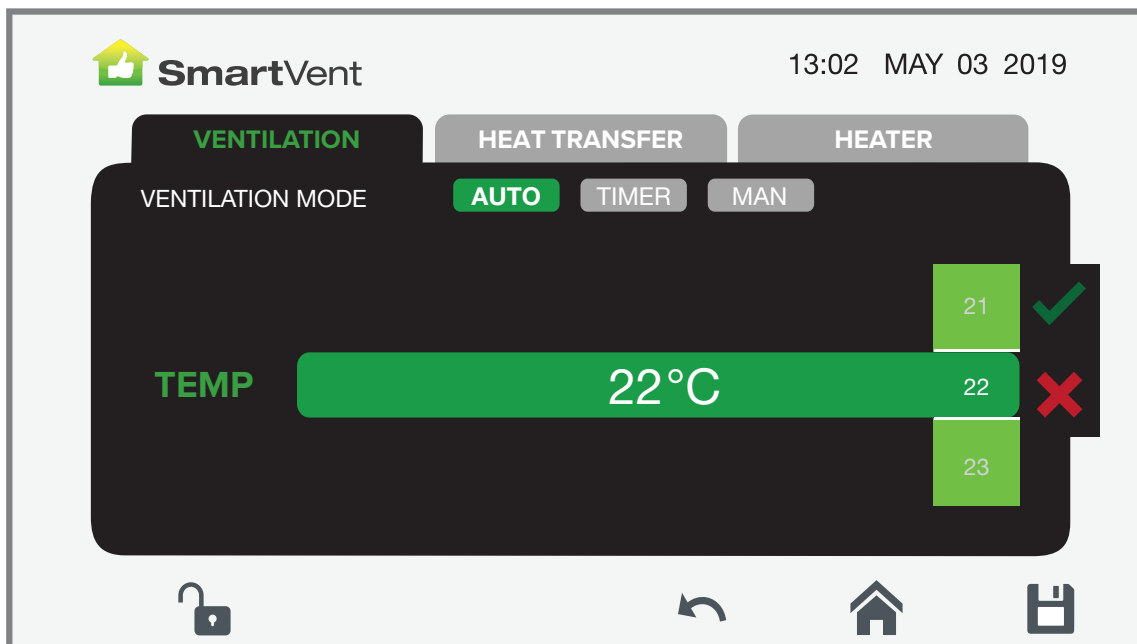

Quick Setup Guide (cont'd)

4 - Set Ventilation Mode and Temperature




- From the home screen press the settings icon .
- Select the **VENTILATION** icon .
- Select **AUTO** ventilation mode.
- Press and scroll through the temperature options select your preferred indoor temperature.
- Press the tick to  confirm.
- Press the save icon  to save your changes.
- Press the home icon  to return to the home screen.


Your standard SmartVent Evolve2 ventilation system is now set up and ready to operate.

For further instruction on how to set up Heat Transfer, go to page 18, or for Tempering Heater set up, go to page 21.


If your system has a Summer Feature installed your SmartVent Evolve2 controller will automatically select the best quality air from either the roof cavity, or the outside.

Screens and Navigation

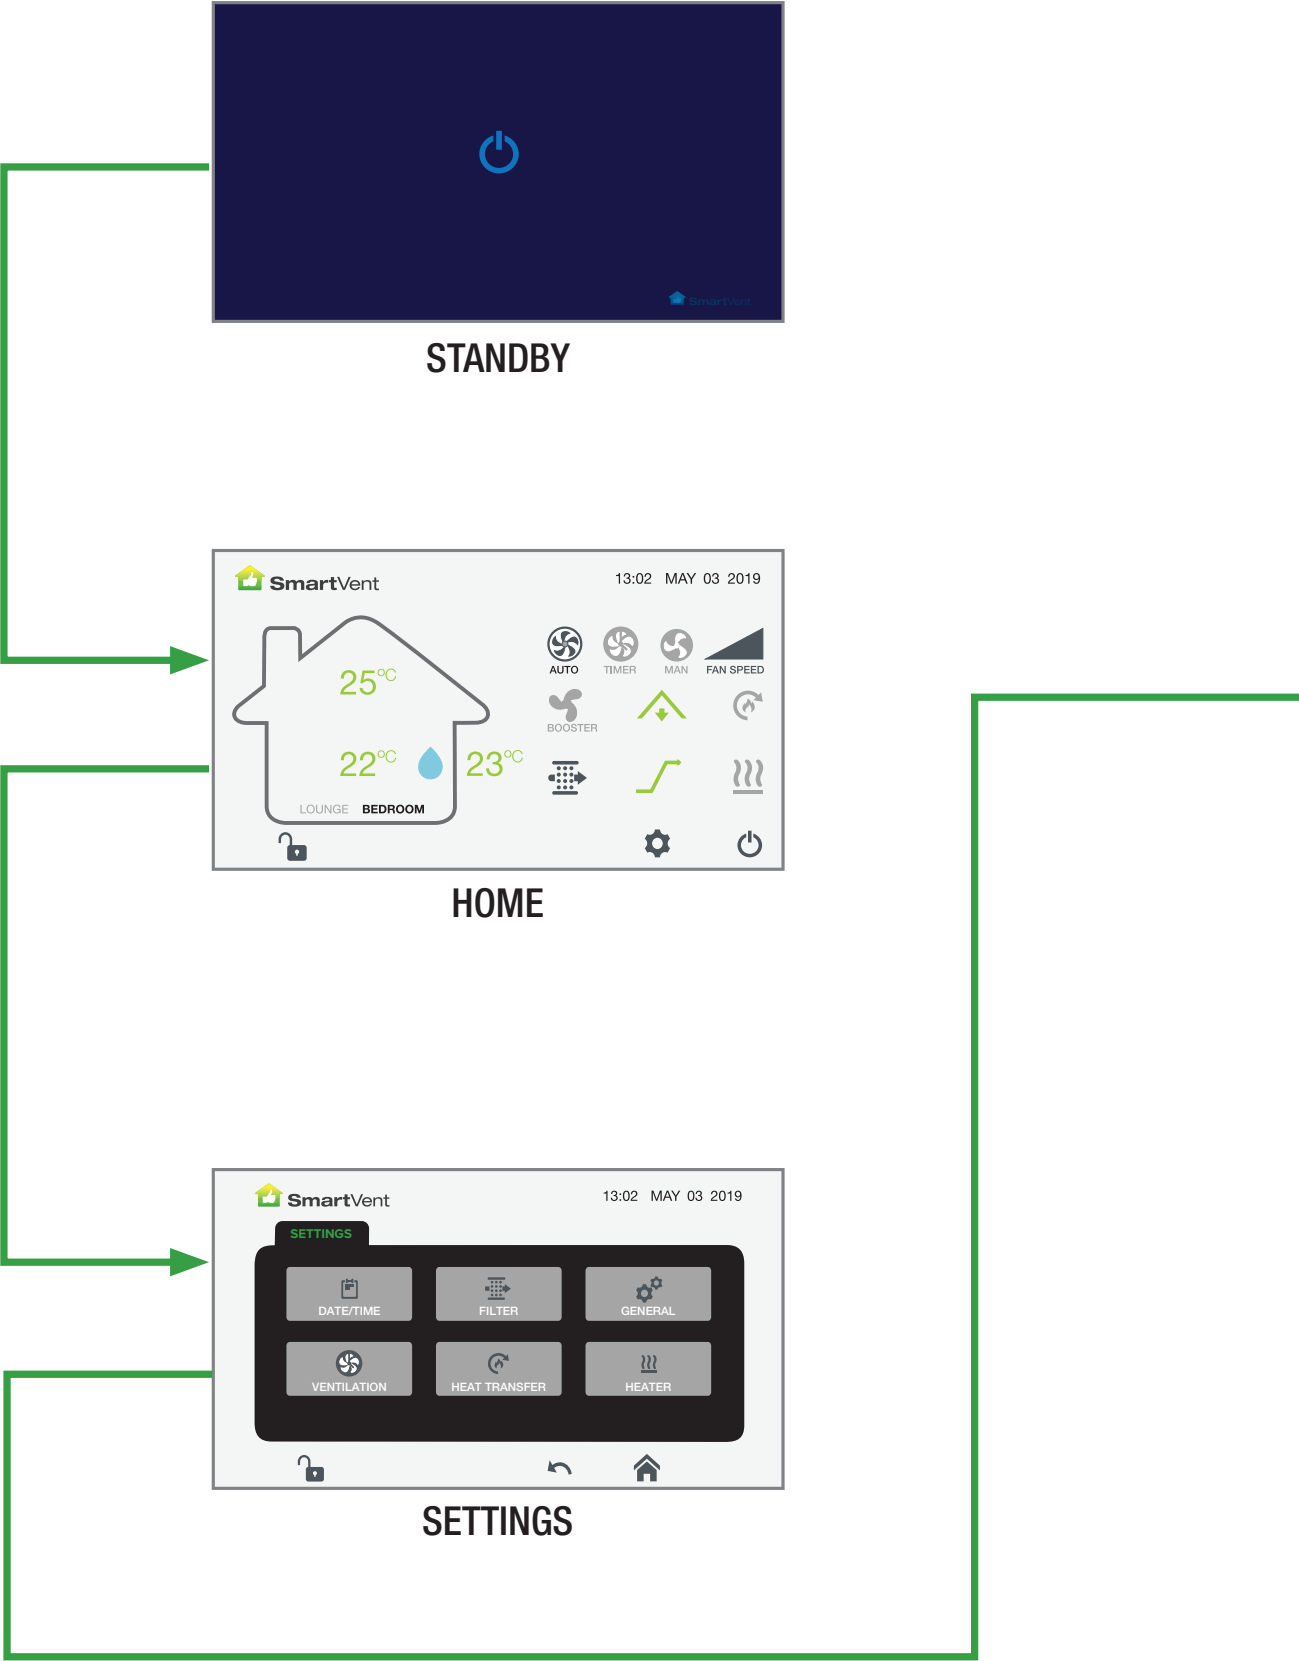


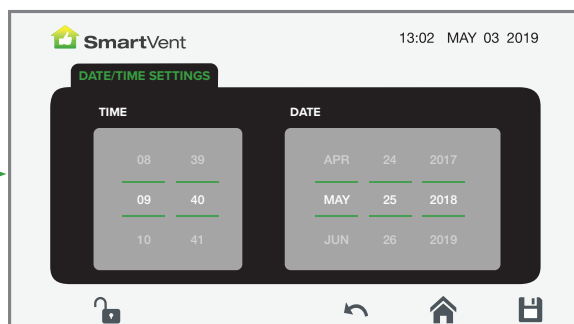


DATE/TIME

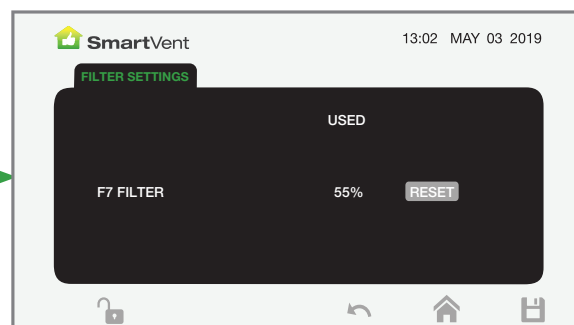


FILTER

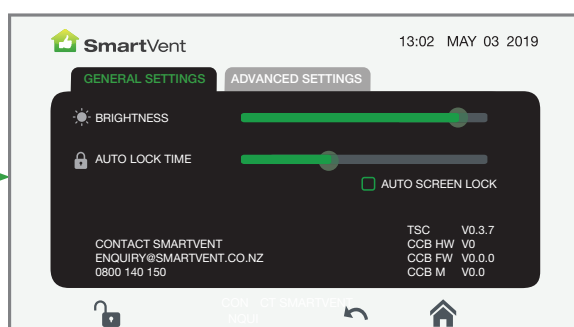


GENERAL

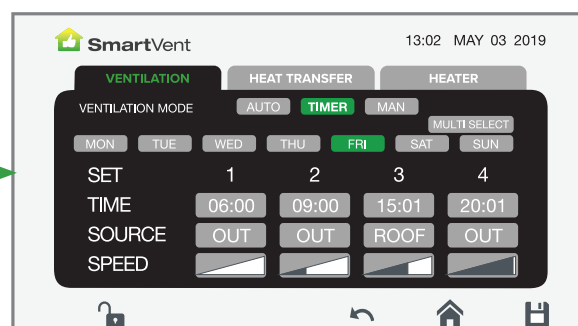

VENTILATION

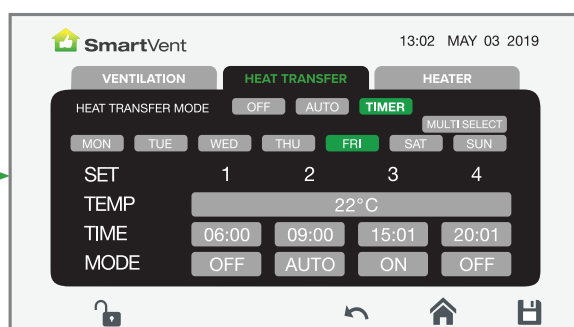


HEAT TRANSFER¹⁾

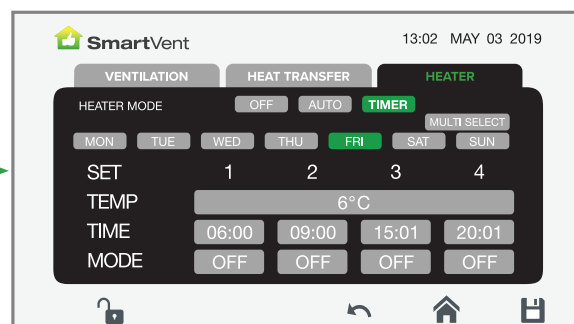


HEATER¹⁾


1) For more information about SmartVent system enhancements, contact 0800 140 150 or email enquiry@smartvent.co.nz


Standby Screen

When your SmartVent Evolve2 controller is first powered on, the standby screen will be shown. Press the standby icon  in the middle of the screen to turn the system on.

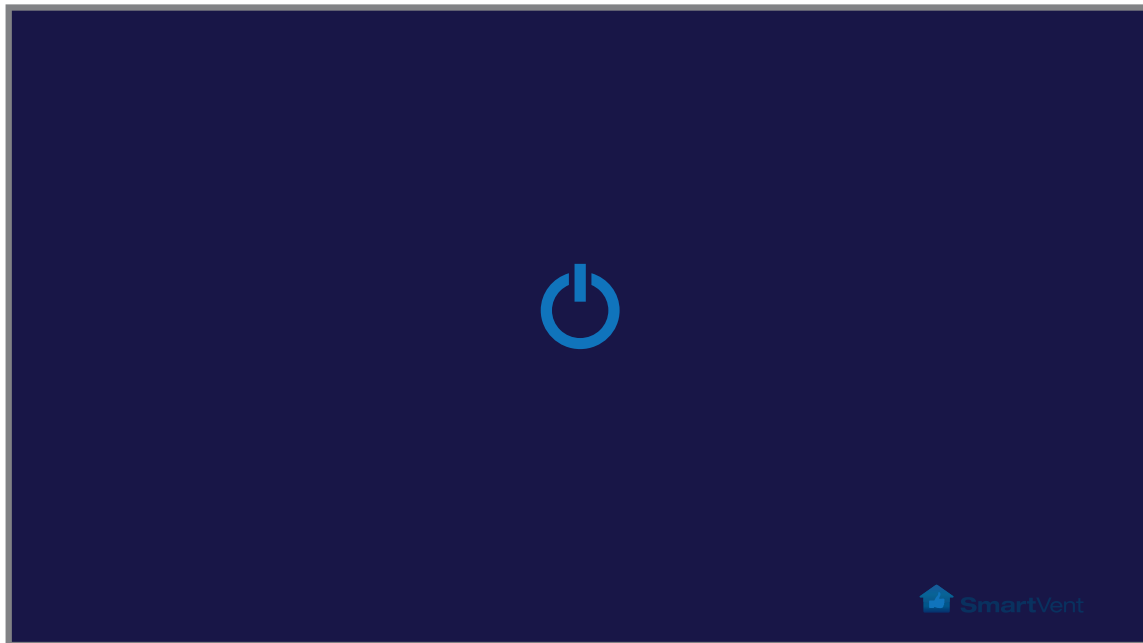


Home Screen

If the screen is locked, press and hold the lock icon  for 5 seconds in the bottom left corner of the screen to unlock.

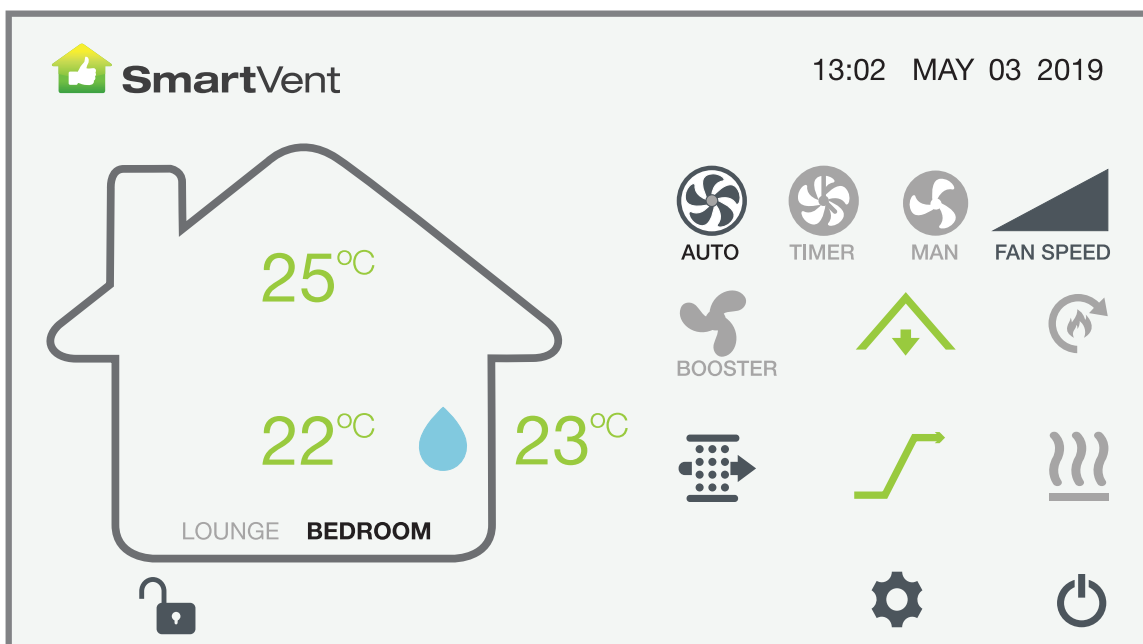

Home Screen Icons

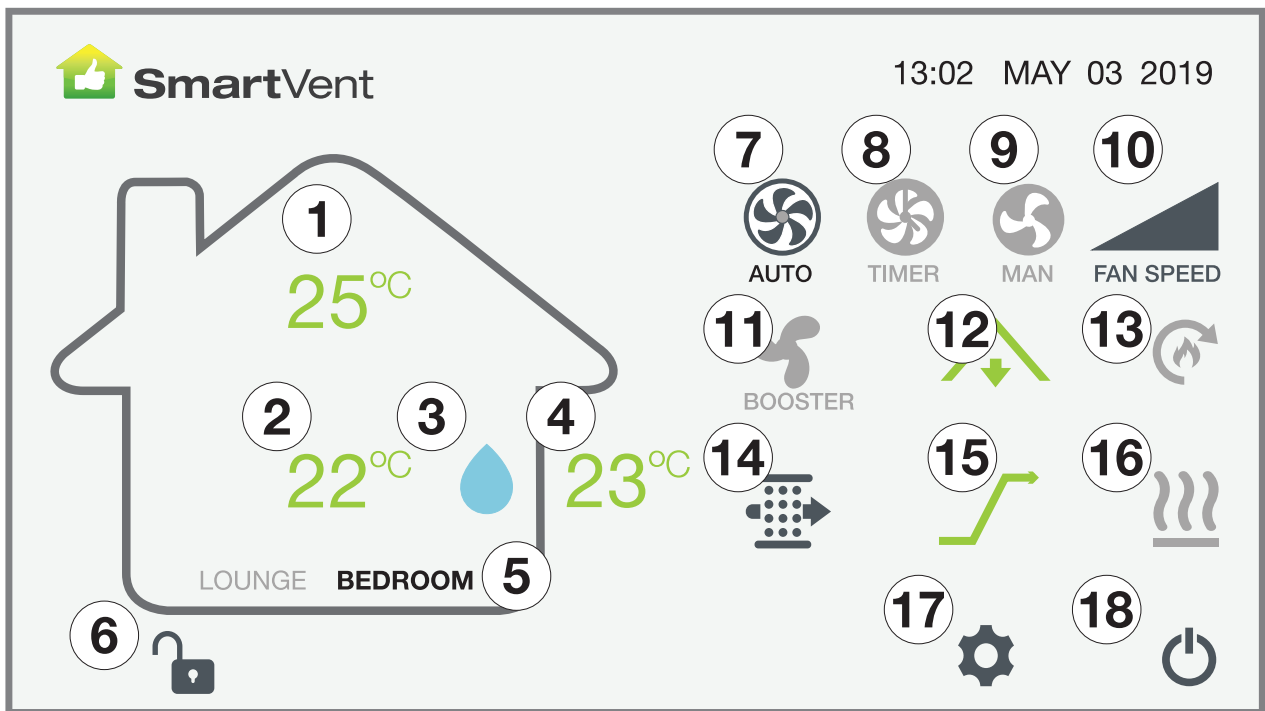

- ① **Roof Cavity Temperature**
- ② **Indoor Temperature**
(showing condition of room selected - LOUNGE or BEDROOM)
- ③ **Indoor Dew Point**
(showing condition of room selected - LOUNGE or BEDROOM)
- ④ **Outdoor Temperature**
- ⑤ **Room Selection**
(tap to select and view either LOUNGE or BEDROOM conditions)
- ⑥ **Lock Button**
(tap and hold for 5 seconds to lock and unlock)
- ⑦ **Ventilation Mode - AUTO**
(tap to activate Auto Vent mode)
- ⑧ **Ventilation Mode - TIMER**
(tap to activate Timer Vent mode)
- ⑨ **Ventilation Mode - MANUAL**
(tap to activate Manual Vent mode)
- ⑩ **Fan Speed**



Home Screen Icons (cont'd)

- 11 Booster**
(tap to boost fan to highest speed for 20 minutes)

- 12 Air Source¹⁾**
(standard configuration) (Summer Feature required for this option)



Roof Cavity



Outside

- 13 Heat Transfer¹⁾ / Recycle**
(Heat Transfer required for this option)



Heat Transfer
& Recycle
OFF



Heat Transfer
ON



Recycle
ON

- 14 Filter Indicator²⁾**
(check filter settings to see which filter needs to be changed)



Good



Change

- 15 Operating System**



Positive Pressure

- 16 Tempering Heater¹⁾**
(Tempering Heater required for this option)



ON



OFF


- 17 Settings Navigation**

- 18 Standby**


1) For more information about SmartVent system enhancements, contact 0800 140 150 or email enquiry@smartvent.co.nz

2) Failing to replace filters when due or installing filters other than genuine SmartVent filter replacements will void the warranty of your system

Settings


For further control options, visit the home screen and press the settings icon . You can navigate this menu by pressing any of the menu icons.



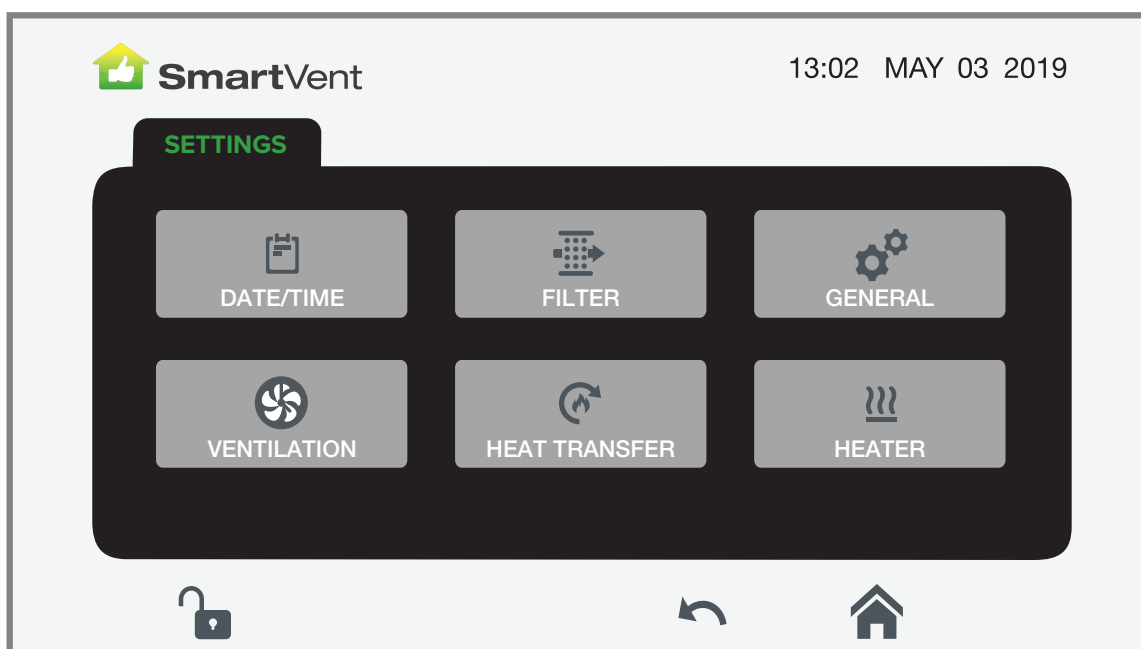

Note: Heat transfer and Heater icons will not be visible if these upgrades¹⁾ are not installed.

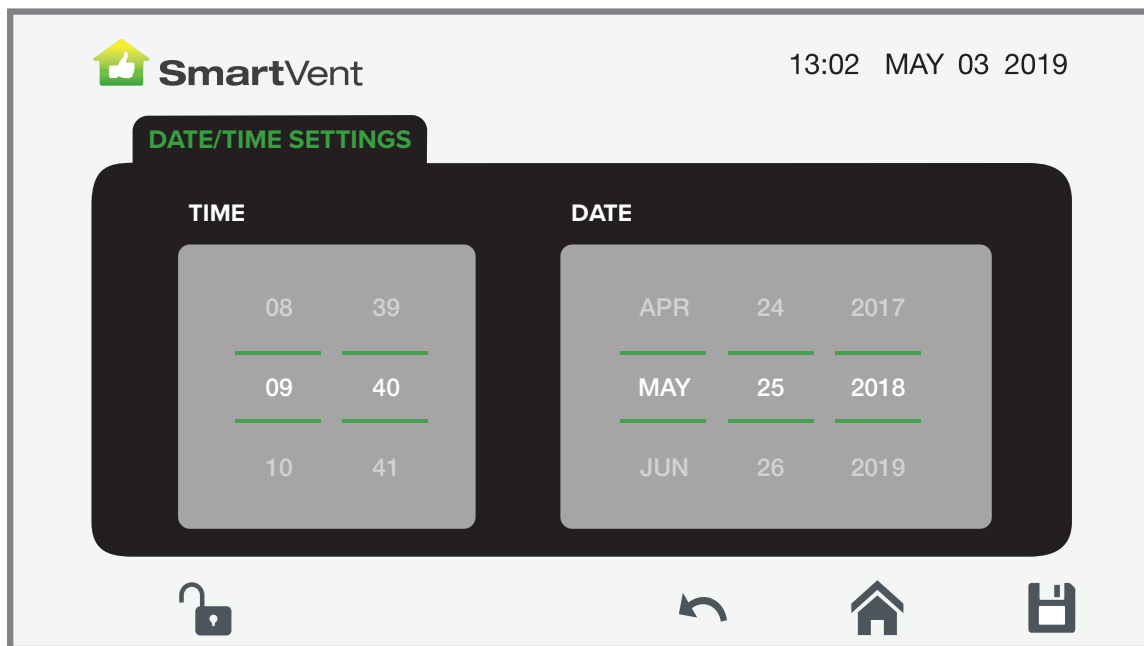

1) For more information about SmartVent system upgrades, contact 0800 140 150 or email enquiry@smartvent.co.nz


Date/Time



- 1 Press the settings icon  on the home screen.
- 2 Select the **DATE/TIME** icon .
- 3 Scroll and select the current date and time.
- 4 Press the save icon  to save your changes.
- 5 Press the home icon  to return to the home screen.


Note: Time needs to be manually changed when daylight saving begins and ends.

Filter

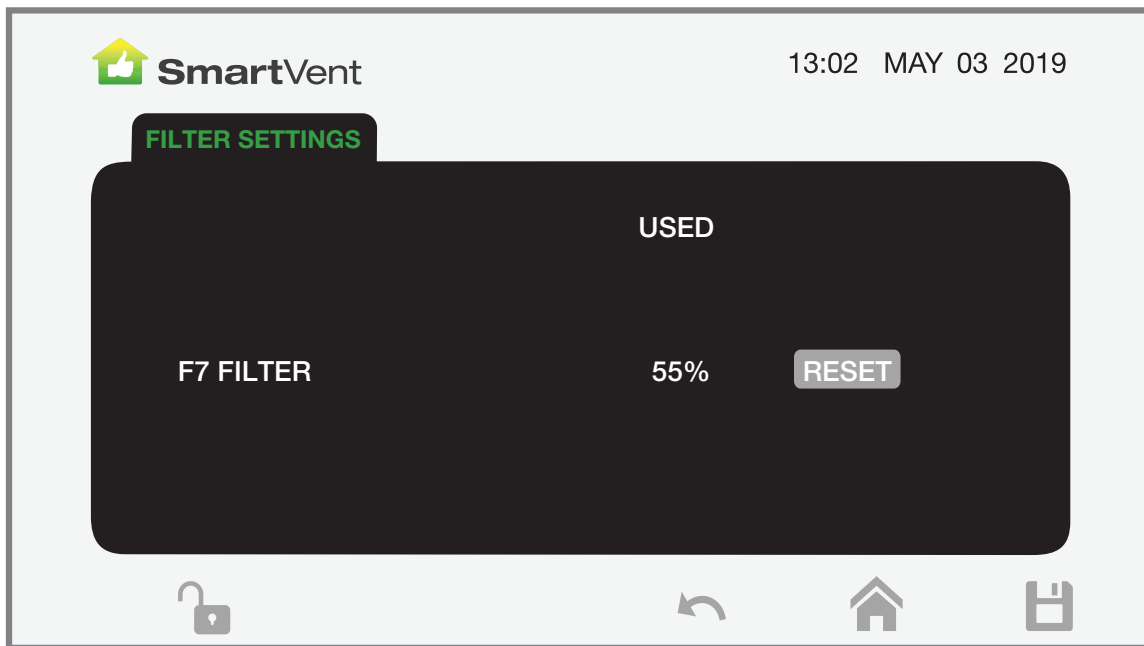

SmartVent Evolve2 systems are supplied with F7 filter(s). Not changing filters on time can affect the reliability and life expectancy of the system.

Expected life of F7¹⁾ filters: 12 Months


- 1 Turn your system OFF before removing used filters.
- 2 After replacing a filter, turn on your system and navigate to the FILTER SETTINGS screen, press the F7 filter RESET icon, and press the Save icon  to reset the filter timer.

Caution: Always install a genuine SmartVent filter to protect your system. SmartVent cannot guarantee the performance of non-genuine filters and how they work with our system, therefore use of non-genuine filters voids your system warranty. If it is not in a green box then it is not a genuine SmartVent filter.

- 3 Press Save icon  to save changes

1) See page 28 for other filter options

General Settings

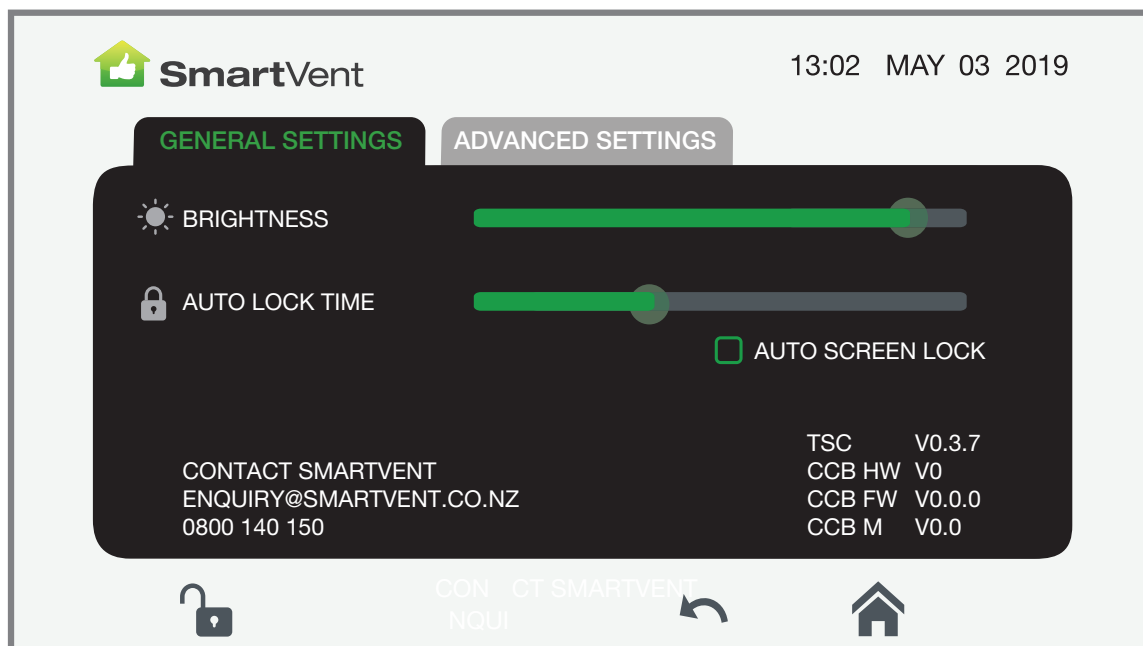

SCREEN BRIGHTNESS

Adjust to your preferred level of brightness by sliding to the left or right

AUTO LOCK TIMER


Adjust your preferred timeout setting for your screen by sliding to the left or right (adjustable from 30 seconds to 10 minutes)

AUTO SCREEN LOCK

Check this box to allow the screen to lock and enter a low power state when the timeout setting is reached.

Note: When the box is unchecked, the screen will not lock automatically.

Settings Interface

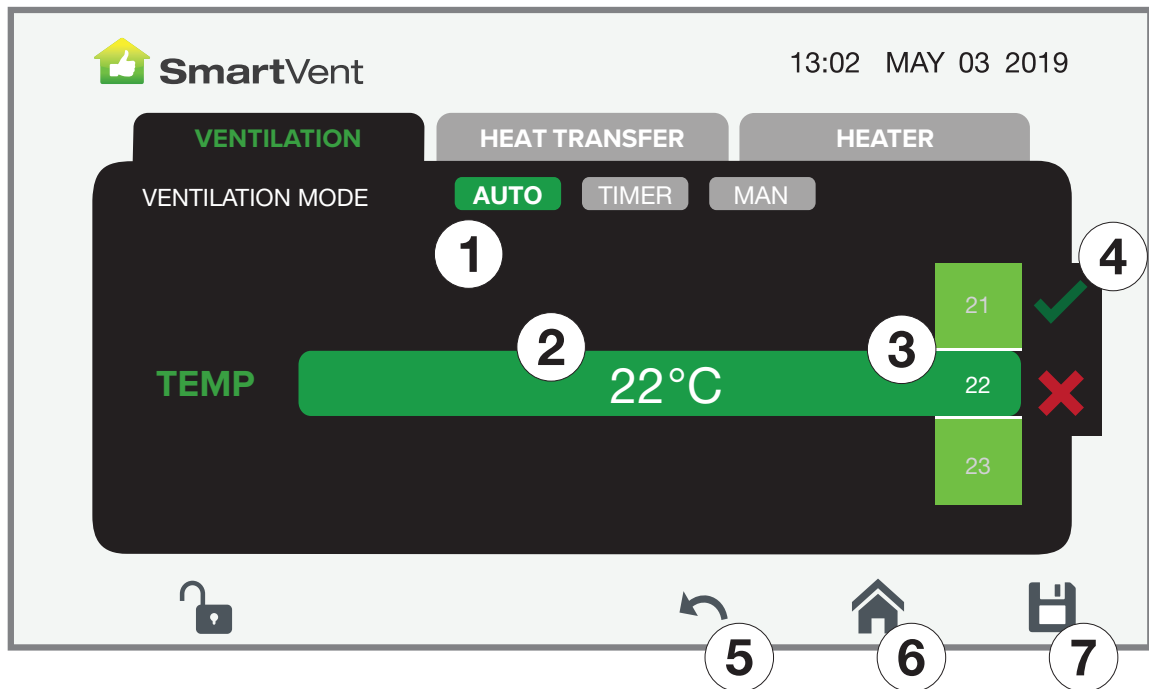

- ① Choose the operating mode
- ② Select a field to modify
- ③ Scroll and select your desired option
- ④ Press the tick ✓ to confirm your selection or cross ✗ to cancel
- ⑤ Press return to previous screen icon ↶ to the settings screen or,
- ⑥ Press the home icon 🏠 to return to the home screen
- ⑦ Press save icon 💾 to save changes

Note: The Save icon only appears when unsaved changes have been made.


Ventilation

AUTO Mode

Your SmartVent Evolve2 system chooses where to draw air from and at what speed depending on indoor dew point and temperature levels – in that order.

Your lounge and bedroom moisture levels have the highest priorities in dictating the fan speed, followed by temperature.

TEMP: This is your preferred indoor temperature.

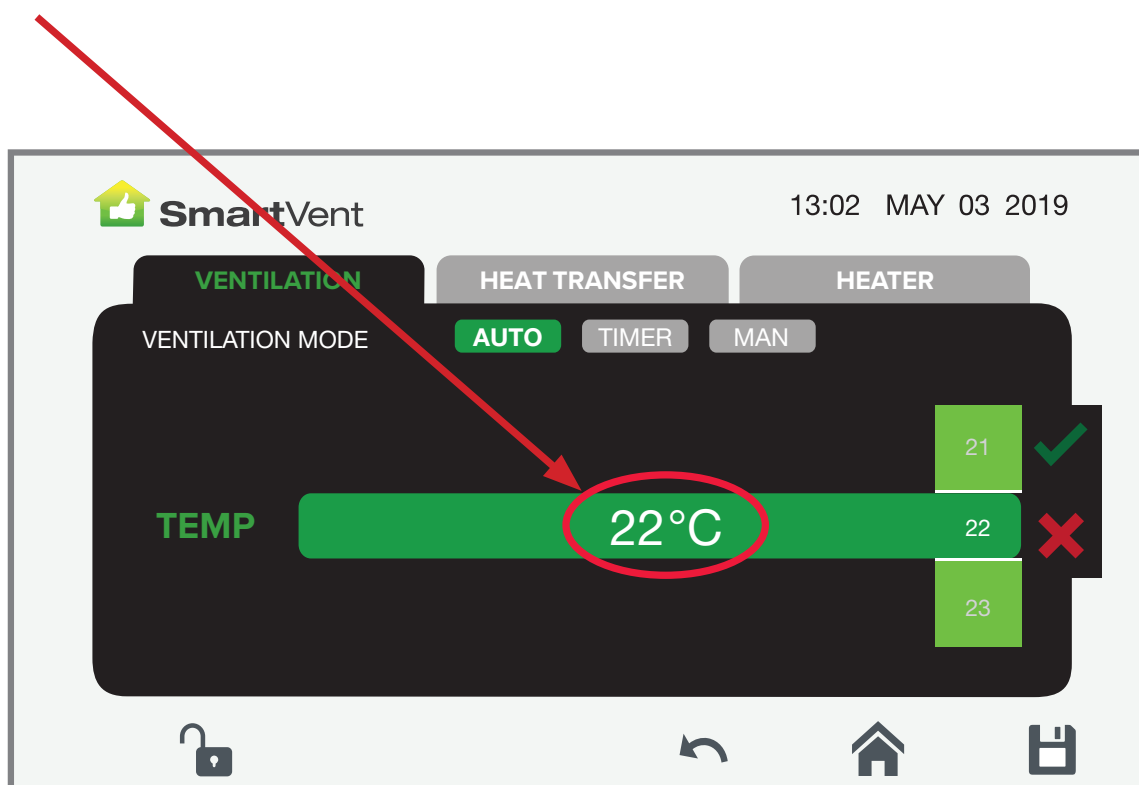

Press Save icon  to save changes

Ventilation (cont'd)

TIMER Mode

Your SmartVent Evolve2 system allows you to schedule any of the following functions, for four periods during the selected day, if required:

- Time
- Source (air)¹⁾
- Speed (fan)

To configure multiple days at the same time, press MULTI SELECT then choose the days you want to configure and then proceed as above. Settings will be applied to all days selected.

Press Save icon  to save changes



1) Outside air option only available when Summer Feature is installed.


Ventilation *(cont'd)*

MANUAL Mode

Your SmartVent Evolve2 system allows manual control of fan speed and air source if required.

Fan speeds can be altered manually by pressing (tapping) either of the fan speed icons.

Press Save icon  to save changes

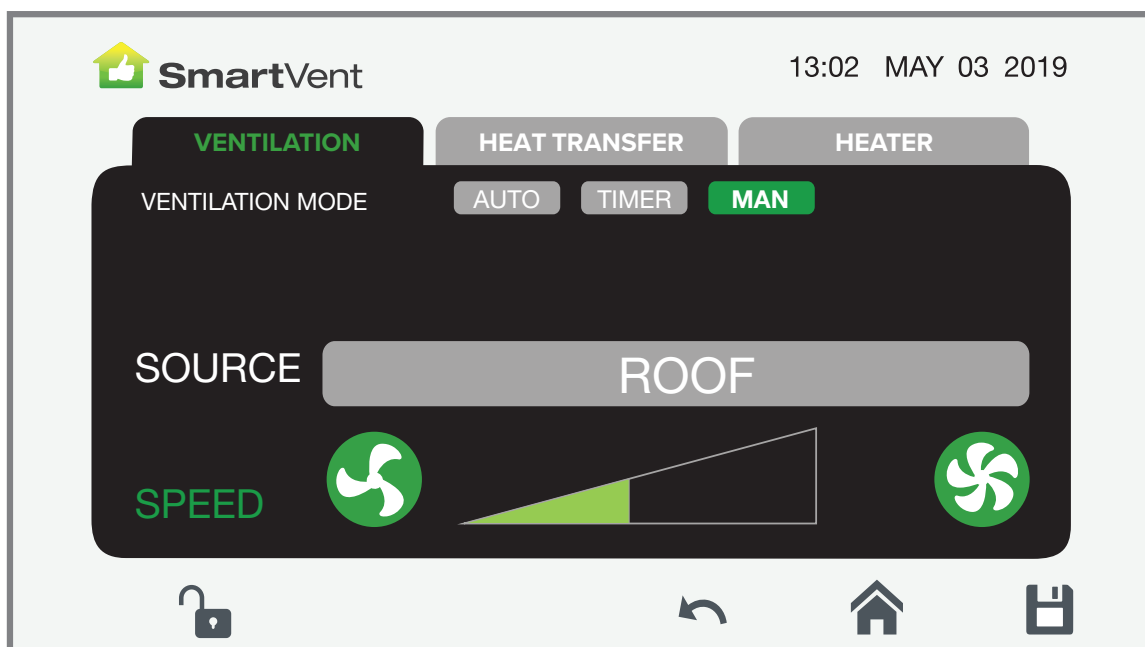


Heat Transfer

When HEAT TRANSFER is on, the fan speed will be low when the lounge temperature is less than, or equal to, your chosen temperature, and it will gradually speed up as your lounge gets warmer.

HEAT TRANSFER mode has priority over VENTILATION mode and there will be no control over moisture when HEAT TRANSFER is active. To ensure your home stays regularly ventilated, we recommend you use the timer function to turn HEAT TRANSFER OFF during the day, the middle of the night and early morning. We also recommend HEAT TRANSFER is set to AUTO in the evening.

OFF Mode

When HEAT TRANSFER mode is disabled (OFF), the system will operate in VENTILATION mode.

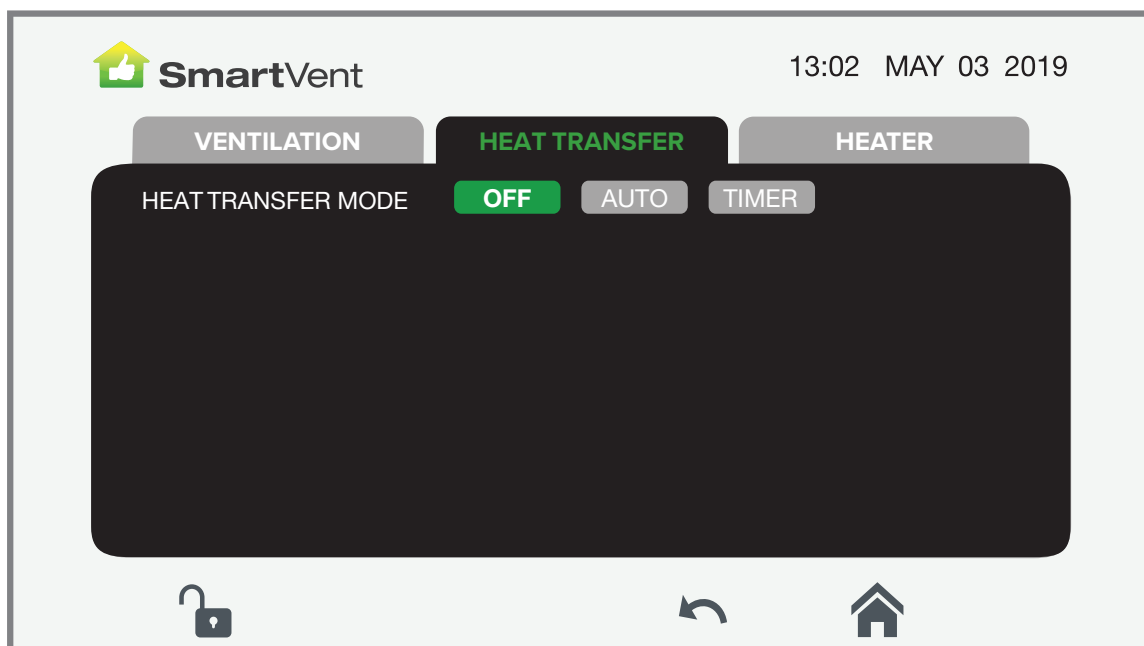


Heat Transfer (cont'd)

AUTO Mode

HEAT TRANSFER starts when the lounge temperature is higher than the set temperature you choose. Your SmartVent Evolve2 system will revert to VENTILATION mode temporarily while the lounge is cooler than this temperature. Scroll and select the minimum temperature you want in your lounge before your system commences transferring heat.


Press Save icon  to save changes

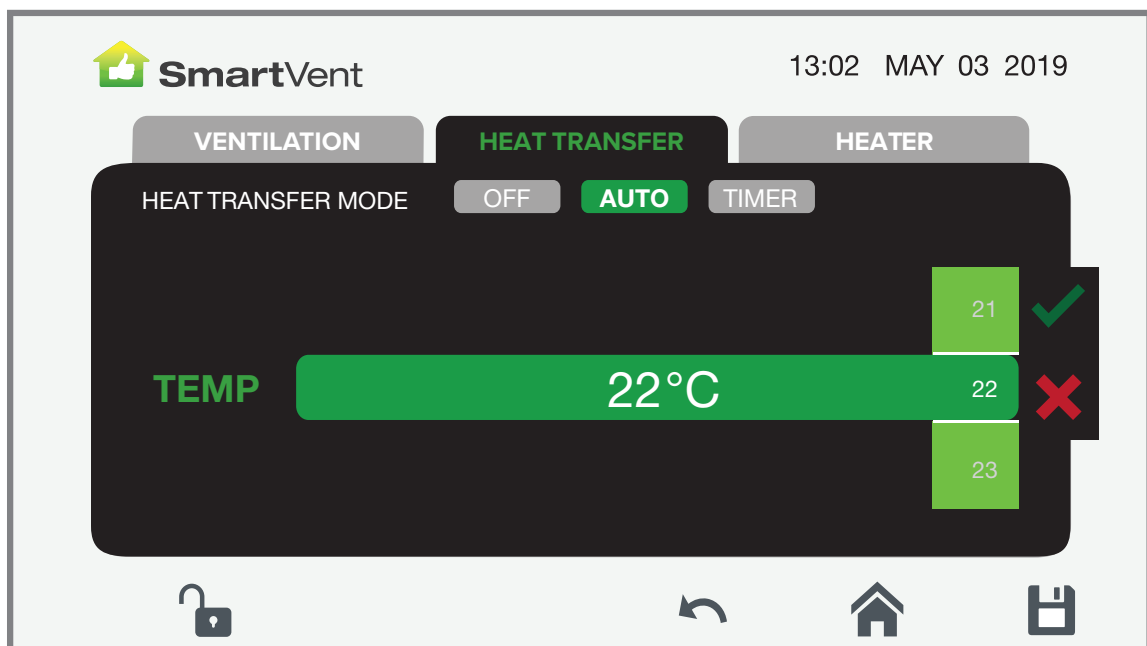

Heat Transfer (cont'd)

TIMER Mode

HEAT TRANSFER can be set to work to a schedule, use this function to make the most of your HEAT TRANSFER feature. We recommend you use the timer function to turn HEAT TRANSFER OFF during the day, the middle of the night and early morning. We also recommend HEAT TRANSFER is set to AUTO in the evening.

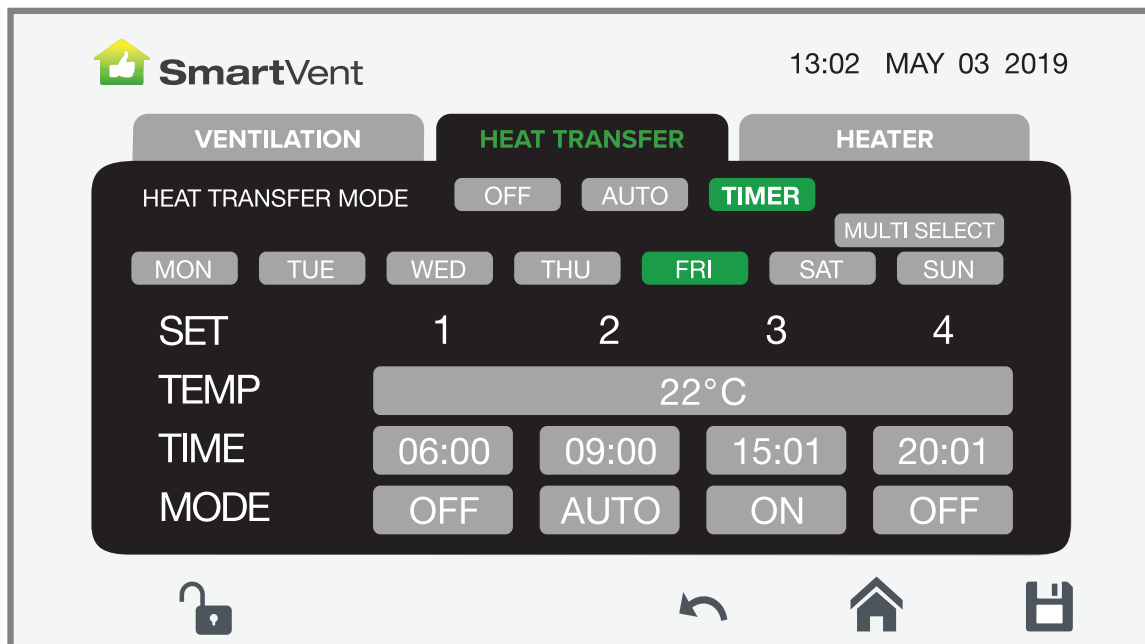

ON Mode

HEAT TRANSFER is on regardless of lounge temperature.

OFF Mode

HEAT TRANSFER is always off. System is in Ventilation Mode.

AUTO Mode

HEAT TRANSFER operates relative to the set temperature.

To configure multiple days at the same time, press MULTI SELECT then choose the days you want to configure and then proceed as above. Settings will be applied to all days selected.


Press Save icon  to save changes

Tempering Heater

Your TEMPERING HEATER works with VENTILATION mode to take the chill off incoming air. When the TEMPERING HEATER is active, the fans will run at a fixed medium speed. The TEMPERING HEATER is not designed to warm your home.

OFF Mode

The TEMPERING HEATER is disabled.

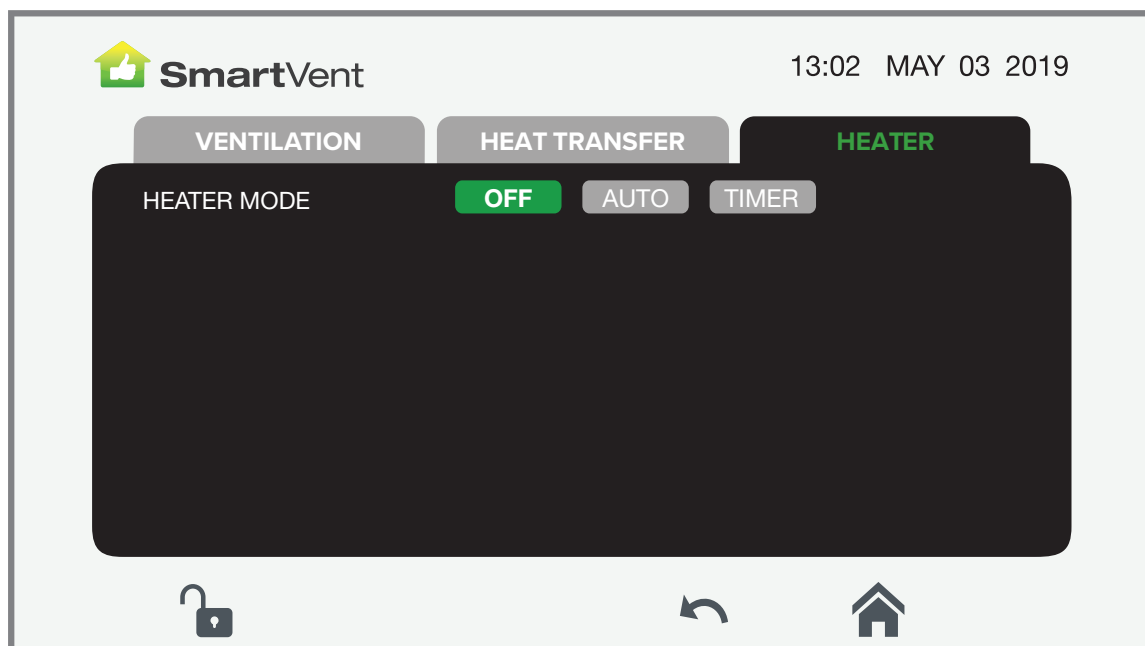


Tempering Heater (cont'd)

AUTO Mode

If a TEMPERING HEATER is installed, the heater turns on when the fresh air temperature is cooler than the set temperature.


Press Save icon  to save changes

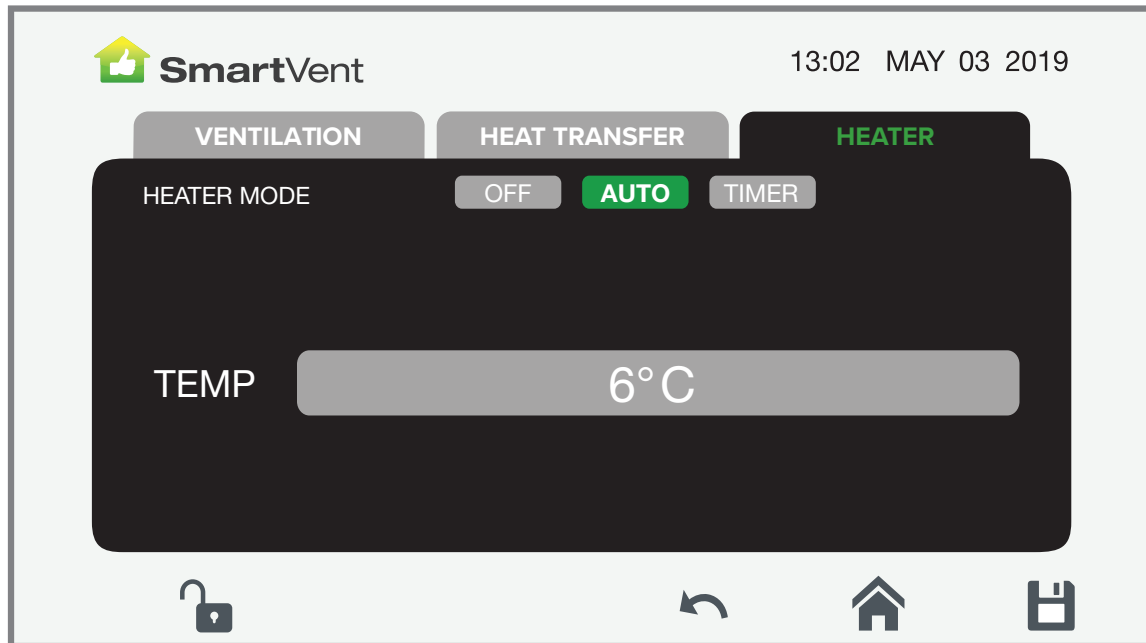

Tempering Heater (cont'd)

TIMER MODE

Your TEMPERING HEATER can be set to work to a schedule, use this function to reduce the running cost of your TEMPERING HEATER. We recommend you use the timer function to turn your TEMPERING HEATER OFF during the day and evening, and set to AUTO overnight and early morning.

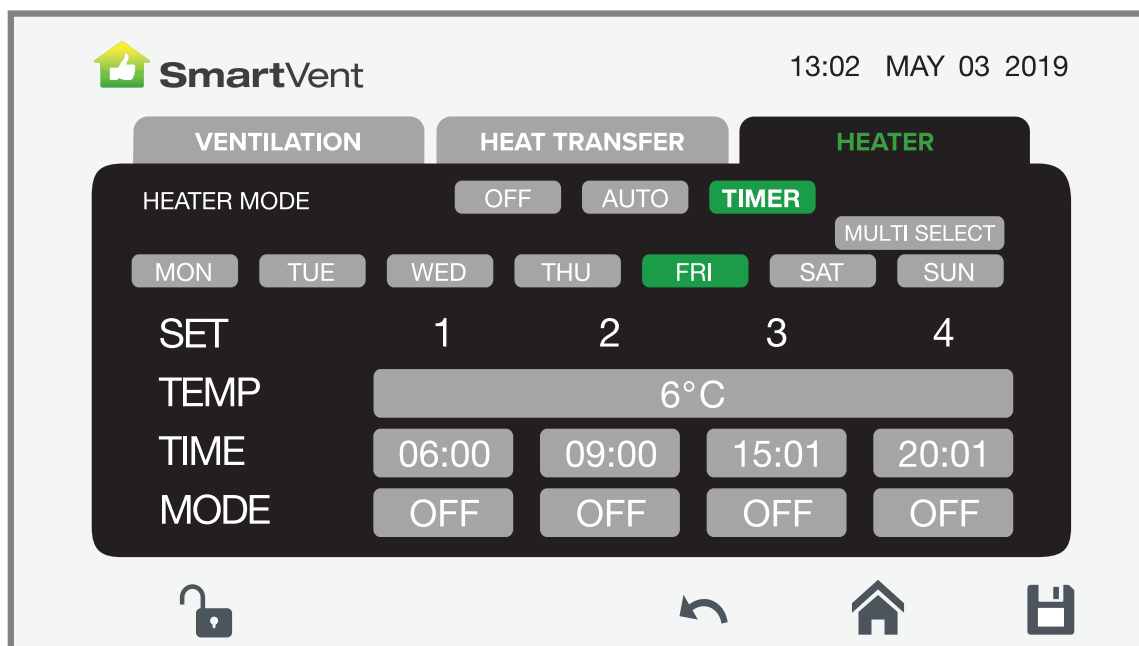

ON Mode

TEMPERING HEATER is on regardless of temperatures.

OFF Mode

TEMPERING HEATER is always off.

AUTO Mode

TEMPERING HEATER comes on as required.

To configure multiple days at the same time, press MULTI SELECT then choose the days you want to configure and then proceed as above. Settings will be applied to all days selected.


Press Save icon  to save changes

Recycle

This feature is only enabled in homes deemed likely to have damp air sources. When your system is in AUTO VENTILATION Mode, and the fresh air sources are damper than your indoor air SmartVent will limit the amount of damp fresh air entering your home.

If you have a Heat Transfer Kit installed you can set the recycle fan speed in the AUTO VENTILATION Mode page.

RECYCLE SPEED is your fan speed when your system is recycling indoor air.

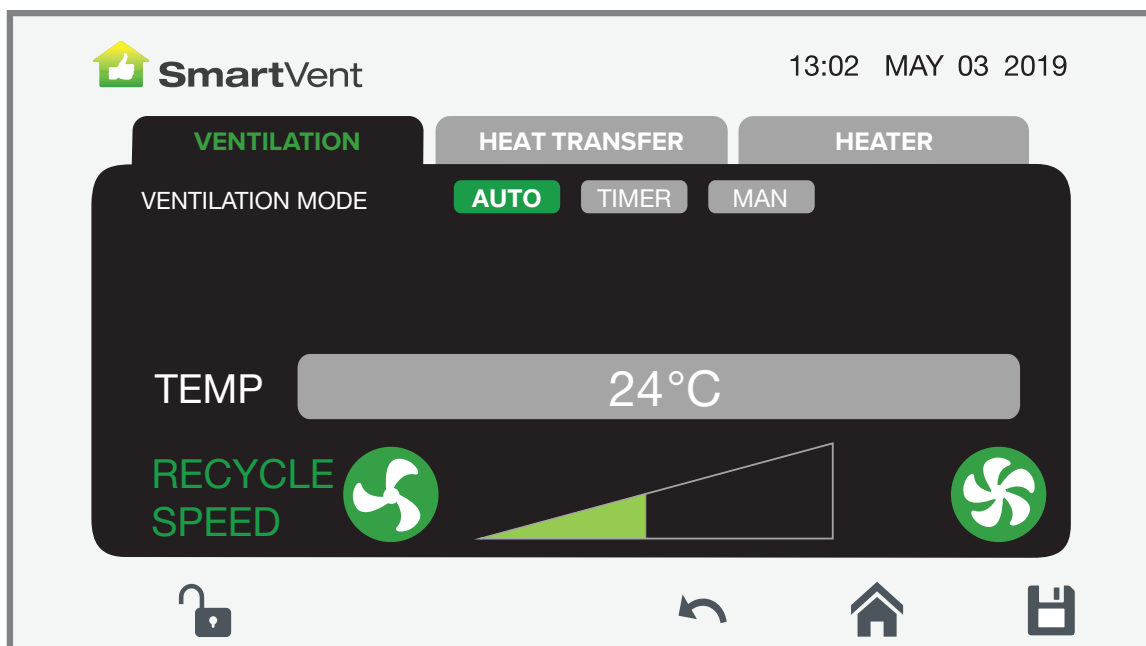

Maintenance

Filter



The filters will require changing when the Filter icon turns red. Navigate to the FILTER page to see which filters are at 100% and replace them.

After replacing the filter select RESET next to the filter that has been replaced and tap the Save button.

Filter Grade	Order Code	Typical Life
F7	FAN2093	12 months
F7 Carbon ¹⁾	FAN2277	6 months
HEPA Carbon ¹⁾	FAN2278	6 months



Caution: When switching to a different grade of filter, remember to modify the KITS SETTINGS to get the correct filter change reminder.

See the INSTALLATION INSTRUCTIONS / Commissioning and Testing for instructions

1) For more information on the benefits of F7 Carbon and HEPA carbon filters, please contact SmartVent on 0800 140 150 or email enquiry@smartvent.co.nz

Troubleshooting

The touchscreen is not responding to touch inputs

- 1 Check to see if the lock icon on the bottom left of the screen is closed .
- 2 If it is, press and hold the icon for 5 seconds to unlock .
- 3 The touchscreen has an automatic screen lock function. Go to the General Settings section on page 24 for more information about how to adjust this function.

There is condensation forming on my windows

- 1 Check that VENTILATION mode is set to AUTO
- 2 If HEAT TRANSFER is installed, ensure the timer function is utilised to allow periods dedicated to ventilating your home. See HEAT TRANSFER section on page 18 for additional information.
- 3 Test if air is coming out of the diffusers. If not then follow the steps in *There is no air coming out my diffusers* below.
- 4 To increase the velocity of air coming into the room, reduce the diffuser opening to 5-10mm.

There is no air coming out my diffusers

- 1 Check that the touchscreen controller is powered on
- 2 Perform a manual test:
 - Set HEAT TRANSFER and HEATER modes to OFF
 - Set VENTILATION mode to MANUAL
 - Cycle through the fan speeds and check for air coming out of your diffusers
 - Make sure you check EVERY diffuser in the house
 - Return your system back to its original settings.
- 3 If there is no air coming out of at least one of your diffusers during the test, report the results to your installer.

My house feels colder with this system installed

- 1 Check your set temperature value in the VENTILATION settings.
- 2 Ventilation system brings in air from either the roof cavity or outside to improve the indoor air quality. This air can sometimes be cooler than your desired indoor temperature. This is normal.

Troubleshooting *(cont'd)*

My house is too hot

- 1 SmartVent systems are designed to provide ventilation to the home. Being able to cool the home down to a comfortable temperature in extreme temperatures is not guaranteed.


Dew Point level icon is grey

- 1 Contact SmartVent support.

Dew Point level are always poor

- 1 This indicates your system is trying to prevent condensation from forming on your windows.


Have I changed my filter properly?

- 1 Filter icon still shows as  after changing the filter
- 2 Filter reset required, see the filter section on page 25 for instructions.

The scheduler is not switching at the right time

- 1 The system has up to a 5 minute delay between switching states.
- 2 Check that your system clock time is correct. The system clock needs to be updated manually when daylight saving begins and ends.

Error Codes

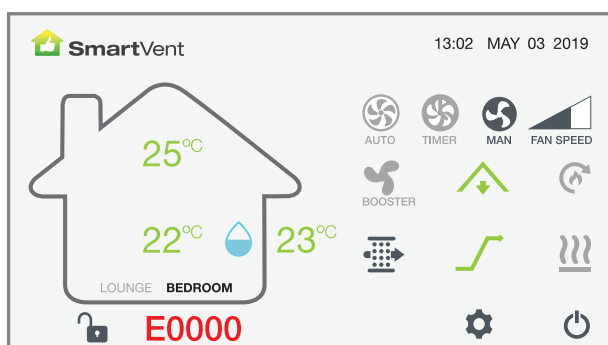

Error codes will appear on the HOME page when there is an electronic fault in the system. If there are multiple faults the error codes will cycle to the next code every 5 seconds.

Code	Description	Actions
E0000	Communication Error Between TSC and Ceiling Controller	Ensure connection between touchscreen controller and ceiling controller is correct and secure, and cable is not damaged.
E0001	Clock Error	Change the time on the TSC.
E1080	Outside Sensor Com Failure	Ensure connection between sensor and ceiling controller is secure, and cable is not damaged.
E1180	Roof Sensor Com Failure	
E1280	Lounge Sensor Com Failure	
E1380	Bedroom Sensor Com Failure	

Contact SmartVent for support on 0800 140 150 if you see error codes not listed above or the actions above do not clear the errors.

Glossary

Air Source

The space where air is taken to ventilate your home. This is either the roof cavity or outside.

Diffuser

An attachment to help spread the flow of air. In a SmartVent Fresh system, it is usually the white round air outlet mounted on the ceiling.

Dew Point

The cooler temperature at which condensation, or water droplets (dew), form when warmer air comes in contact with a colder surface such as a window or glass surface. The SmartVent Fresh system can reduce the dew point of your indoor air and decrease the chances of condensation.

Heat Transfer

An optional add-on feature of the SmartVent Fresh system. The heat transfer function takes the excess heat from your designated room and transfers it to other areas via the SmartVent fan ducting system.

Intake Grille

An attachment to the ducting to prevent large objects being drawn into your system. In a SmartVent system, it is usually the white, square or round air inlet on the soffit, end of a duct in the roof space or, if you have a heat transfer upgrade installed, in your heat source room.

Positive Pressure System

Fresh, filtered air supplied from your roof cavity or outside and distributed into living areas in your home. This is the most common type of ventilation system sold in New Zealand.

Synergy2 System

The SmartVent range of heat recovery or energy recovery ventilation systems. They typically feature a ventilation method composing of a supply fan and a extract fan with a recovery core. Synergy2 is suitable for homes constructed after 2002.

Touchscreen Controller (TSC)

The SmartVent's touchscreen user Interface typically mounted on a wall inside your home.

Technical Specifications

Operating Voltage/Frequency:	220-240 VAC 50Hz
Switching Voltage:	240V AC max
Switching Current:	5A max resistive load
Controller Operating Temperature:	0 to 50°C
Controller Operating Humidity:	5-90% non condensing
Sensor Operating Temperature:	-20°C to 70°C
Sensor Operating Humidity:	5-90% non condensing
Live Output Isolation:	Relay
Output Control:	Relay
Display:	7" Colour Touchscreen
Approval:	AS/NZS 60335.1:2011 +A1-A4
EMC Approval:	AS/NZS CISPR14:2015

Notes

Contact: 0800 140 150
enquiry@smartvent.co.nz

Specifications are subject to change without notice.



Distributed by Simx Limited
PO Box 14 347, Panmure, Auckland, NZ.
Technical Support (09) 259 1662 | e: enquiry@smartvent.co.nz | w: www.smartvent.co.nz

PUB1434 1809